

SH001

Basic Manual

READ THIS MANUAL TO MASTER
THE CELLULAR PHONE

www.au.kddi.com

Illustrations and
Screenshots
in This Manual

Notes on
Cell Phone Use

Contents

Getting Ready

Making and
Answering Calls

Global Function

Character Input

Phone Book

Pair Function

Mail

Camera

EZweb

EZ News Flash/
au one Gadget

EZ Navi

TV (1 Seg)

In Case of
Loss of Your SH001

Troubleshooting

Index

Introduction

Thank you for purchasing the SH001. Before using your SH001, be sure to read the SH001 Basic Manual (this PDF manual) to ensure correct usage. After you have finished reading this manual, store this PDF manual and the printed manuals in safe places so you can retrieve them whenever you need them.

Manuals for the SH001

The SH001 comes with the Basic Manual and Instruction Manual.

● For learning the basics:


Read the SH001 Basic Manual (this manual).

● For learning details on using each function:

Read the supplied SH001 Instruction Manual (Japanese). Be sure to read the Safety Precautions “安全上のご注意” to ensure proper usage of the SH001.

The keyword searchable au Online Manual is also available on the au homepage:

<http://www.au.kddi.com/manual/index.html>

- To access from EZweb:  ⇒ *au one Top* ⇒ *auお客さまサポート* (au Customer Support) ⇒ *調べる* (Search) ⇒ *オンラインマニュアル* (Online Manual)

 
Scan this QR code to access the au Online Manual. ▶



Illustrations and Screenshots in This Manual

Note on Illustrations

The illustrations in this manual may look different from the actual cell phone in shape, color and typeface. The key illustrations are also simplified as shown below.

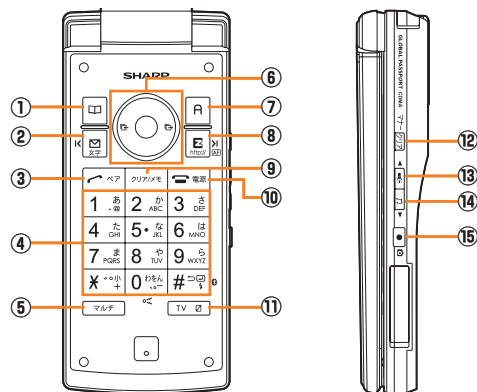

	Key Illustration		Key Illustration
①		⑦	
②		⑧	
③		⑨	
④		⑩	
		⑪	
		⑫	
		⑬	
⑤		⑭	
⑥		⑮	

Note on Screenshots

The screenshots in this manual are simplified and may look different from the actual cell phone screens.

- The display design themes of the SH001 vary by model color. The screenshots for the Sapphire Blue model are used in this manual.

Notes on Cell Phone Use

Cell Phone Etiquette

The cell phone always emits weak radio waves when power is on.

Use the cell phone in an enjoyable and safe manner without forgetting to be considerate of others around you.

- **Use of cell phones is not allowed in some places.**
 - Do not use the cell phone while you are driving. Doing so is both dangerous and prohibited by law.
 - Using a cell phone in an aircraft is prohibited by law. Set Airplane Mode to *ON* and turn the cell phone power off.
- **Radio waves from cell phones may interfere with medical electrical equipment.**
 - Some people close to you in crowded places such as packed trains may be using a cardiac pacemaker. Turn the cell phone off in such places.
 - Abide by the rules of hospitals and other medical institutions where it is forbidden to use or carry cell phones.
- **Be considerate of where you use the cell phone and how loudly you talk.**
 - Do not make calls in theaters, museums, libraries, and other similar places. Turn power off or turn on manner mode not to disturb others around you by ring tones.
 - Do not use the cell phone on a street where you might interrupt the flow of pedestrians.
 - Move to areas where you will not inconvenience others on trains or in hotel lobbies.

- Refrain from talking in a loud voice.
- Obtain the permission of other people before you take their photos with the cell phone's camera.
- Do not record information with the cell phone's camera in bookstores and other locations where taking photos is not permitted.

Do Not Use the Cell Phone While Driving!

Turn off your cell phone or put it in Drive Mode while driving.

 


Do not use the cell phone while driving a car/motorcycle or riding a bicycle. It may result in a traffic accident. Using a cell phone while driving is prohibited by law. Using a cell phone while riding a bicycle may also be punishable by law.

Prohibited!

- Looking at a cell phone display
- Talking on a cell phone while holding it

Drive Mode

In Drive Mode, a Japanese message meaning "I'm driving now, so I can't answer your call." is played when a call is received, and asks the caller to leave a message on the answer memo.

When the standby screen is displayed, press , use  to select *Drive*, and then press  (Set).

Disaster Message Board Service

When a large scale disaster occurs, you can register your safety information from EZweb. The registered information can be referred from anywhere in Japan from EZweb or Internet.


Registering safety information

- When a large scale disaster occurs, from an au phone, you can register your safety information (i.e. your condition and comments) to the 災害用伝言板 (Disaster Message Board) created on the EZweb.
- After registration of your safety information, e-mail is sent to your family or acquaintances you have previously designated to notify that your safety information has been uploaded to the 災害用伝言板 (Disaster Message Board).

Inquiring for safety information

- You can inquire for safety information of a person by entering his/her phone number from EZweb or Internet.*
* To inquire from other carriers' cell phone, a PHS or PC, access "<http://dengon.ezweb.ne.jp/>".

Access	 ⇒ <i>au one Top</i> ⇒ 災害用伝言板 (Disaster Message Board)
	http://dengon.ezweb.ne.jp/

- The maximum storage period of the registered information is 72 hours.
- The maximum available number of registrations is ten per phone number. When the number of registrations exceeds ten, the oldest one is overwritten.
- The demonstration of this service can be referred to anytime by pressing  ⇒ *au one Top* ⇒ *auお客様サポート* (au Customer Support) ⇒ *調べる* (Search) ⇒ 災害用伝言板 (デモ版) (Disaster Message Board (Demo Version)).
- To view the Disaster Message Board in English, select *English* from the top menu of the Disaster Message Board.

Contents

Introduction

Illustrations and Screenshots in This Manual 1

Notes on Cell Phone Use 2

Cell Phone Etiquette	2
Do Not Use the Cell Phone While Driving!.....	2
Disaster Message Board Service	3

Contents 4

Getting Ready 6

Checking the Contents of the Box	6
Names of Parts	7
Own Photo Position and Viewer Position	8
Charging the Battery Pack	9
Learning the Basics	10
Turning On Power	11
Switching the Display Language to English	11
Initial Setup of E-mail and EZweb	11
Checking Your Phone Number and E-mail Address ...	11
Display Indicators	12
Using Main Menu	13
Changing Your E-mail Address	14
Security Code and Passwords.....	15

Making and Answering Calls 16

Making a Call	16
Making an International Call.....	16

Answering a Call	17
Returning a Call (Outgoing History/Incoming History) ...	18
One-ring Calls.....	18
Adjusting the Earpiece Volume during a Call	18
Turning On Manner Mode.....	18
Changing the Incoming Ring Tone	19
Adjusting the Incoming Ring Tone Volume	19
Turning On the Answer Memo	20

Global Function 21

Setting the Area to Use	21
Making a Call to Japan from Overseas	21

Character Input 22

Character Entry Modes	22
Entering Alphanumeric Characters	22
Entering E-mail Addresses	23
Entering Pictograms	24

Phone Book 25

Saving a Phone Book Entry	25
Dialing from the Phone Book	25
Editing Phone Book Entries	25
Saving a Phone Number from the Incoming or Outgoing History	26

Pair Function 27

Registering a Pair Partner	27
Making a Call to a Pair Partner	27
Sending Mail to a Pair Partner.....	27


Mail	28	EZ Navi	41
Using E-mail	28	Passenger Seat Navi for People in the Passenger Seat to Check the Route	41
Creating and Sending E-mail Messages	28	Security Navi to Check Where Your Kids Are	41
Reading Received E-mail Messages	29	EZ Navi Walk for When You Go Out	42
Reading an E-mail Message with an Attached Photo or Movie.....	29	Evacuate Navi to Guide You Home or to Nearby Evacuation Areas during Disasters	43
Replying to Received E-mail Messages.....	29	TV (1 Seg)	44
Rejecting Spam	30	Initial Setup of au Media Tuner	45
Using C-mail	31	Watching TV (1 Seg)	45
Creating and Sending C-mail Messages	31	Basic Operations	46
Reading Received C-mail Messages	31	Exiting the au Media Tuner	46
Camera	32	In Case of Loss of Your SH001	47
Photo Taking Tips	32	Setting Conditions for Activating the Remote Ctrl Lock.....	47
About Photo Modes	33	Remotely Activating the Remote Ctrl Lock on Your SH001	47
Taking a Photo	33	Activating the Remote Ctrl Lock by the Security Lock Service	48
Viewing Photos	34	Troubleshooting	49
EZweb	35	Index	51
Accessing Sites	36		
Bookmarking Frequently Accessed Pages	37		
Viewing Bookmarked Pages	37		
Checking Charges	38		
Downloading Chaku-Uta-Full-Plus™/ Chaku-Uta-Full®/Chaku-Uta®	38		
EZ News Flash/au one Gadget	39		
Basic Operations	39		
Setting EZ News Flash	39		

Getting Ready

Checking the Contents of the Box

The box contains the cell phone and accessories.

 - Cell Phone
- Battery Pack

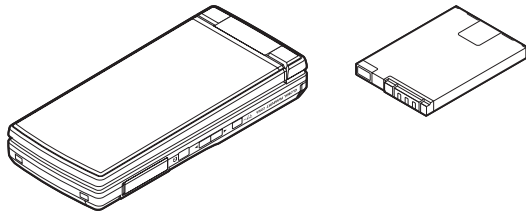


- CD-ROM
- Instruction Manual (Japanese)
- Warranty (Japanese)
- Safety Precautions (Japanese)
- Global Passport CDMA Owner's Guide (Japanese)
- Osafu-Keitai® Guide (Japanese)
- JIBUN BANK Launcher Operation Guide (Japanese)
- CCD 8M Camera Promotional Flier (Japanese)
- Notice Sheet (Japanese)


- The common AC adapter 01/02, desktop holder, earphone plug adapter 01 for external connection jack, USB cable, stereo earphone, and microSD memory card are not included with your cell phone. Purchase these items separately.

Names of Parts


 
From Front (Open Position)

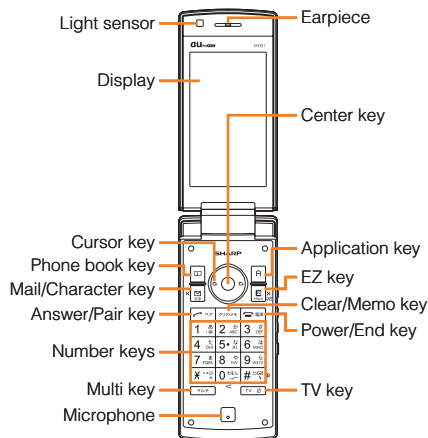

Diagonally from Front (Closed Position)

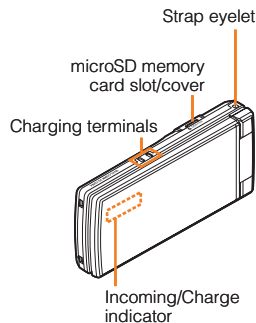 

Diagonally from Back (Closed Position)

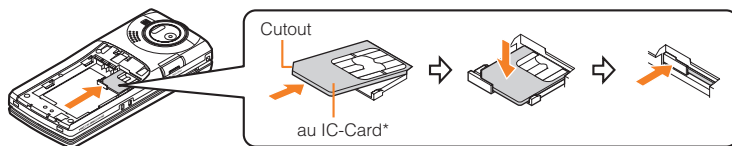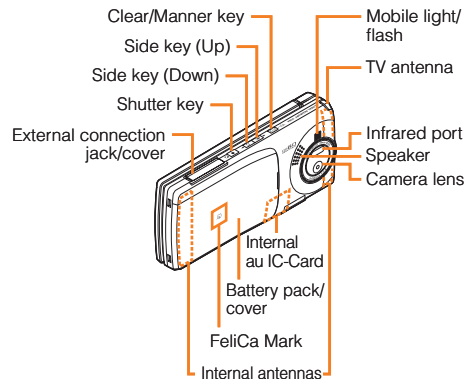  


* Do not remove this card unnecessarily as your phone number is recorded on it.


Own Photo Position and Viewer Position

With the SH001, you can use your cell phone in different positions by switching from the opened state (Open Position) to the Own Photo Position or Viewer Position.

 Open the display.

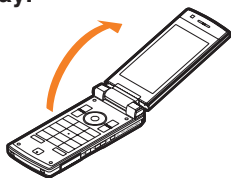


 ➔ Turn the display portion 180 degrees clockwise.

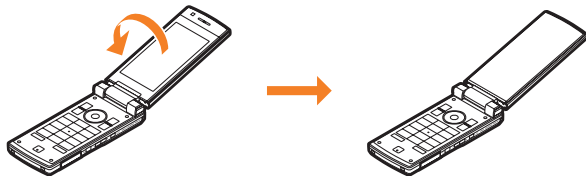

Own Photo Position

 ➔ Close the display from the Own Photo Position.

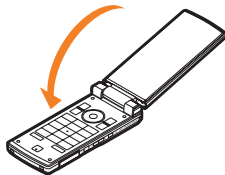


Viewer Position

- Keep the display facing inside (Closed Position) when carrying the cell phone around. Carrying the cell phone around in the Viewer Position could result in damage to the display.
- Do not rotate the display forcefully. This could result in damage to the cell phone.
- The microphone cannot be used in the Viewer Position.

Charging the Battery Pack

The battery pack is not fully charged at the time of purchase. Be sure to charge the battery pack before using the cell phone for the first time.

 - An AC adapter and desktop holder are not included with your cell phone. Purchase a common AC adapter 01/02 and desktop holder separately.

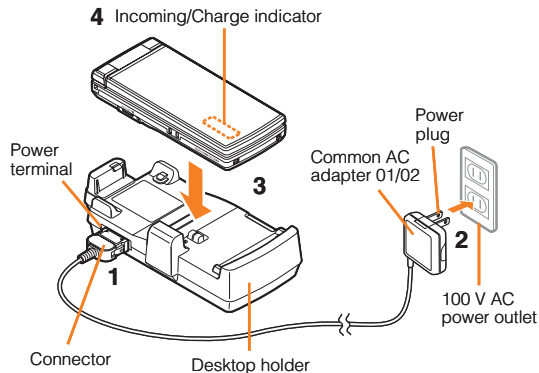

➔ Connect the common AC adapter 01/02 to the desktop holder.

- Check the shape of the connector of the common AC adapter 01/02 and then plug it straight into the power terminal of the desktop holder.

➔ Unfold the power plug of the common AC adapter 01/02 and plug it into a 100 V AC power outlet.

➔ Close the cell phone with the battery pack attached and insert it into the desktop holder as shown in the figure.

➔ Confirm that the incoming/charge indicator lights.

- Charging: The incoming/charge indicator lights.
- Charging finished: The incoming/charge indicator goes out.

- Hold the desktop holder while removing the cell phone.
- You can also charge the battery pack by connecting the common AC adapter 01/02 directly to the external connection jack.

Learning the Basics

Key Assignments

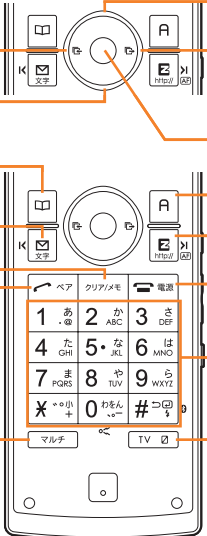 


Diagram illustrating the key assignments for the top screen and keypad of the mobile phone.

Top Screen Keys:

- : Display Incoming History.
- : Display the Notification icon and Shortcut menu.
- : Use Phone Book.
- : Send/receive e-mail/c-mail.
- : Set/cancel Answer memo. Delete characters. Cancel operation.
- : Make/answer calls. Use the Pair function.
- : Start another function during a call or operation.
- : Display the ticker field, search window, info pane and gadget (setting icon).
- : Display Outgoing History.
- : Display Main menu.
- : Activate EZapps.
- : Display EZ Service menu.
- : Turn power on/off. End call/communication. Cancel operation.

Keypad:

- : Input phone numbers and characters.
- : Activate au Media Tuner, and set/cancel new Veil View (long press).

Side Key Assignments







Diagram illustrating the side key assignments of the mobile phone.

- : Set/cancel manner mode.
- : Turn on the mobile light (long press).
- : Activate LISMO Player (long press).
- : Activate Camera.

- If you lose track of where you are or if you make a mistake, press to return to the previous screen. Return to the standby screen by holding down for at least one second.

Hiding/Redisplaying the Notification Icon


When the notification icon is displayed on the standby screen, you can temporarily hide it by pressing  (Back), and then display the Main menu by pressing . To redisplay the hidden notification icon, press  when the standby screen is displayed.

Notification Display




Turning On Power

Hold down  for at least one second.

- You cannot receive or make calls if  (out of range indicator) is displayed.

Turning Off Power







When the standby screen is displayed, hold down  for at least one second.

Switching the Display Language to English

You can switch the display language for function names and other items to English.

When the standby screen is displayed, press .

- ➔ Use  to select 設定 (Settings) and then press  (選択 [Select]).

- ➔ Use  to select 画面表示 (Screen Display) and then press  (選択 [Select]).
- ➔ Use  to select *Set Language* and then press  (選択 [Select]).
- ➔ Use  to select *English* and then press  (Set).

Initial Setup of E-mail and EZweb

To use e-mail and EZweb, you need to apply for an EZweb subscription. If you did not apply for an EZweb subscription at the time of purchase, contact an au shop or the au Customer Service Center.

Also, before use, you need to configure initial settings. Your e-mail address is assigned automatically in the initial setup.



When the standby screen is displayed, press .

- ➔ Press .


After a short while, your e-mail address is displayed.

- ➔ Press .

The initial settings are complete.

 
- You can also configure initial settings by pressing  or .

Checking Your Phone Number and E-mail Address

When the standby screen is displayed, press  and then .




Display Indicators

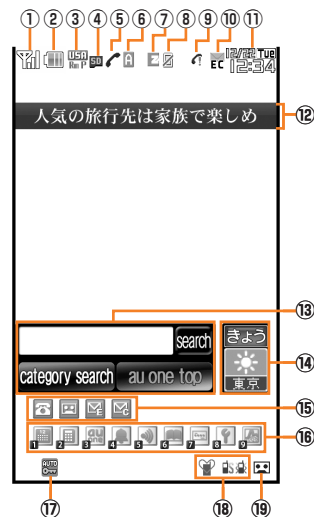Display indicators inform you of mail arrival, current settings, etc.



Indicator	Description
①	Signal strength
②	Battery level
③	USA Current overseas area (e.g. America)
	Rm Calling available in current overseas area
	P Packet communication available in current overseas area
④	SD A microSD memory card (commercially available) inserted
⑤	During a call
	au Media Tuner activated
⑥	EZapps activated
⑦	Connecting to EZweb
⑧	New Veil View set
	Receiving EZ News Flash information

Indicator	Description
⑨	Missed calls
⑩	New or unread e-mail/c-mail
⑪	— Current date and time
⑫	— Ticker field
⑬	— Search window
⑭	— Info pane
⑮	— Notification icons
⑯	— Shortcut menu
⑰	Auto Lock activated
⑱	Manner mode set
⑲	Answer memo or manner mode set

- The date and time are set automatically.
- You can hide the ticker field, info pane and search window by pressing . To redisplay the hidden items, press  and then press .

Using Main Menu

You can access various functions from the Main menu. The Main menu patterns vary by model color. The screenshots for the Sapphire Blue model are used in this manual.


Model Color	Main Menu Pattern
Sapphire Blue	Standard
Topaz Pink	Cute!
Quartz White	SH-MURA

Each Main menu pattern has a different set of items.

Standard	Cute!	SH-MURA
		
INFRARED	Global	Infrared
LISMO PLAYER	Dictionary	LISMO Player
MICRO SD	JIBUN BANK	microSD
CAMERA	Music&TV	Camera
DATA FOLDER	Photos	Data Folder
PC SITE VIEWER	Daily Life	PC Site Viewer
TOOLS	Tools	Tools
TV	Data Folder	TV
BLUETOOTH	Settings	Bluetooth
GLOBAL FUNCTION		Global
SETTINGS		Settings
JIBUN BANK		JIBUN BANK

Changing Your E-mail Address

 You can change the account name of your e-mail address.

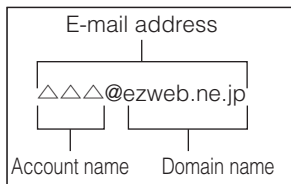

When the standby screen is displayed, press .

➔ Use to select *E-mail Setup* and then press (Select).

➔ Use to select *Other* and then press (Select).

The cell phone connects to the server.

➔ Use to select *Eメールアドレスの変更* (Change E-mail Address) and then press (Select).

➔ Use to select the entry box, press (Input), enter your security code, and then press (OK).

- Your security code is the four-digit number you wrote on your subscription form.
- If the security code is incorrectly entered three times consecutively during a single day, the e-mail address change operation will be disabled until the next day.

➔ Use to select *送信* (Send) and then press (Select).

➔ Use to select *承諾する* (Accept) and then press (Select).

➔ Use to select the entry box, press (Input), enter an e-mail address using single-byte alphanumeric characters, and then press (OK).

- For details on entering e-mail addresses, see page 23.

➔ Use to select *送信* (Send) and then press (Select).

➔ Use to select *OK*, press (Select) and then (OK).

- Check that the e-mail address has been updated before pressing (OK).

- Your e-mail address cannot be changed if the new address you enter in the above procedure is already being used. In this case, enter a different e-mail address.

Security Code and Passwords

You can use a security code and other passwords described below.

Take care not to forget your security code and passwords, because they are required for performing various operations and using subscription services.

Security Code

Usage Example	①Using the Answering Service (Voice Mail) and Call Transfer remotely from a fixed-line phone ②Making inquiries, applications, and changes while using au Customer Service Center voice guidance, au web pages, and EZweb ③Changing the settings of <i>Mail Filter</i> or <i>Other</i> under E-mail Setup
Initial Setting	The four-digit number you wrote on your subscription form

Lock No.

Usage Example	Changing various settings of the cell phone
Initial Setting	1234

EZ Password



Usage Example	Subscribing or canceling subscriptions to EZweb fee-based contents
Initial Setting	The four-digit number you wrote on your subscription form

Premium EZ Password

Usage Example	①Subscribing or canceling subscriptions to EZweb fee-based contents paid by まとめてau 支払い (au Collective Payment Service) ②Purchasing products from EZweb sites using まとめてau 支払い (au Collective Payment Service)
Initial Setting	The four-digit number you wrote on your subscription form

Making and Answering Calls

Making a Call

When the standby screen is displayed, use  to  to enter a phone number.


- When calling to a fixed-line phone, you also need to enter the area code.



➔ Press .

- To end the call, press .

- After you enter a phone number, you can add 184 or 186 to the phone number as follows:

➔ Press .

➔ Use  to select *Add Special No.* and then press .

➔ Use  to select *184* or *186* and then press .

184: When you do not want to inform the other party of your phone number.

186: When you want to inform the other party of your phone number.

Making an International Call

au International Call Service

Available without any additional application




Example: To call 212-123-△△△△ in the USA

Press      .

 
 

↑
International access code

➔ Press .

↑
Country code (USA)

➔ Press   .

↑
Area code

➔ Press    △△△△.

↑
Phone number


➔ Press .

- Calling charges for this service are added to monthly cell phone calling charges and billed together.
- Check the country code at the au Customer Service Center.
- For charges, refer to au MOBILE PHONE SERVICE GUIDE or contact the au Customer Service Center.

 
001 KOKUSAI MOBILE TALK

Application required.

For inquiries, contact the KDDI Customer Service Center.

 0077-7160

(toll-free; open 9:00 to 20:00 everyday including weekends and national holidays)



- Charges for 001 KOKUSAI MOBILE TALK are charged separately from monthly au telephone charges.
- Check the country code at the au Customer Service Center.
- For charges, refer to au MOBILE PHONE SERVICE GUIDE or contact the au Customer Service Center.

Answering a Call

To answer a call, press .

- To end the call, press .

Display When a Call is Received


The phone number of the caller appears.



If the caller's phone number and name are in the phone book, the name is also displayed.

When the phone number of the caller is not displayed, one of the following indicators may appear.

Indicator	Meaning
<i>ID Unsent</i>	The caller has not notified of his/her phone number.
<i>Payphone</i>	The call is from a pay phone.
<i>Not Support</i>	The caller is using a phone that does not have a calling number identification function.

Missed Call Notification


If you did not answer a call,  and *Missed Call* are displayed to let you know that you missed a call.

To check the caller's phone number, use  to select *Missed Call* and then press  (Select). You can then return the call (see page 18).


Returning a Call (Outgoing History/Incoming History)

Example: Returning a call to a phone number in the incoming history

When the standby screen is displayed, press .

- Press  while the standby screen is displayed to display the Outgoing History screen.

➔ Use  to select the phone number you want to call and then press  (Detail).

- Press  to display the Outgoing History screen.

➔ Press .


- The cell phone can store up to 50 phone numbers in each of the incoming and outgoing history.

One-ring Calls

What is a One-ring Call?



A one-ring call is a call from an unknown caller that only rings once, causing it to be stored in the incoming history. One-ring calls are often used to get you to return the call, which will connect you to a dating service or some other service that charges you at high rates.

One-ring Indicator

 (blue) indicator on the Incoming History screen indicates you have received a one-ring call (a call rang for three seconds or shorter). Be careful when you return a call to an unknown caller.


Adjusting the Earpiece Volume during a Call





During a call, use .

- : Increases the volume.
- : Decreases the volume.


➔ Press  (OK).





Turning On Manner Mode

When the standby screen is displayed, hold down  for at least one second.

This turns on manner mode, and displays ,  and  on the standby screen. This also turns on Answer memo, which is indicated by  on the standby screen.

Turning Off Manner Mode


















When the standby screen is displayed, hold down  for at least one second.

Turning off manner mode causes ,  and  to disappear from the standby screen. Answer memo is also turned off, which is indicated by  disappearing from the standby screen.

- Even in manner mode, the cell phone still emits a sound when autofocusing, a shutter sound when you take a photo.















Changing the Incoming Ring Tone

When the standby screen is displayed, press .

- ➔ Use  to select *SETTINGS* and then press  (Select).
- ➔ Use  to select *Sound/Vib/Lamp* and then press  (Select).
- ➔ Use  to select *Incoming Setup* and then press  (Select).
- ➔ Use  to select *Incoming Call* and then press  (Select).
- ➔ Use  to select  (Ringtone) and then press  (Select).
- ➔ Use  to select *Original* and then press  (Select).
- ➔ Use  to select a ring tone and then press  (Set).
The incoming ring tone is set.
 - If you press , the tone plays.
- ➔ Press  (OK).

Adjusting the Incoming Ring Tone Volume


When the standby screen is displayed, press .


- ➔ Use  to select *SETTINGS* and then press  (Select).
- ➔ Use  to select *Sound/Vib/Lamp* and then press  (Select).
- ➔ Use  to select *Incoming Setup* and then press  (Select).
- ➔ Use  to select *Incoming Call* and then press  (Select).
- ➔ Use  to select  (Ringtone Volume) and then press  (Select).
- ➔ Use  to adjust the volume and then press  (Set).
 - Each press of  changes the volume one step.

<i>STEP</i> ↑	The ring tone volume gradually increases.
<i>STEP</i> ↓	The ring tone volume gradually decreases.
Maximum ↑ Standard ↓ Minimum	The ring tone sounds at the set volume.
<i>OFF</i>	
	The ring tone does not sound.



➔ Press  (OK).

 Turning On the Answer Memo

When the standby screen is displayed, hold down  for at least one second.

  is displayed on the standby screen.






Turning Off the Answer Memo

When the standby screen is displayed, hold down  for at least one second. The answer memo is turned off and  disappears from the standby screen.

- The cell phone can record a maximum of ten messages, each up to 60 seconds long.
- Answer memo is a function that automatically answers calls and allows callers to record messages. Use the Answering Service (Voice Mail) when your phone is turned off or when you are in a location where a signal cannot be received.













Playing a Message

If a message is recorded, *Answer Memo* appears on the standby screen.

- ➔ Use  to select *Answer Memo* and then press  (Select).
- ➔ Use  to select the message you want to play and then press  (Play).
 - To stop playing the message, press  (Stop).

Deleting a Message

When the standby screen is displayed, press .








- ➔ Use  to select *Answer Memo* and then press  (Select).
- ➔ Use  to select *Answer Memo List* and then press  (Select).
- ➔ Use  to select the message you want to delete and then press  (SubMenu).
- ➔ Use  to select *Delete* and then press  (OK).
- ➔ Use  to select *Delete One* and then press  (OK).
- ➔ Use  to select *YES* and then press  (OK).

Global Function

You can use your SH001 in an overseas area with support for Global Passport CDMA without making any special application.








Setting the Area to Use

When the standby screen is displayed, press .

- ➔ Use  to select *GLOBAL FUNCTION* and then press  (Select).
- ➔ Check the precautions and then press  (OK).
- ➔ Use  to select *Area Setting* and then press  (Select).
- ➔ Use  to select *Overseas* and then press  (Select).

Making a Call to Japan from Overseas


When the standby screen is displayed, press the number keys to enter the phone number of the other party.

- ➔ Press  (Call).
- ➔ Use  to select *Voice Call* and then press  (OK).
- ➔ Use  to select *Call to Japan* and then press  (OK).
- ➔ Press  or  (Call).


- Some functions are restricted in overseas mode.
- Although the available area information (PRL: Preferred Roaming List information) is already set at the time of purchase, it may be updated several times a year. Update it to the latest data before your departure.
- When you make an overseas call from Japan to a cell phone compatible with Global Passport CDMA, you can use the normal procedure.
- Make sure you subscribe to EZweb and set the initial settings while you are in Japan.



Character Input

Character Entry Modes

When a character entry screen is displayed, you can select a character entry mode if you press  (Char.).



Menu Items

 

 
 

 
 
 




- 漢 : Kanji conversion mode
- ア : Double-byte katakana mode
- 7 : Single-byte katakana mode
- A : Uppercase alphanumeric (double-byte) mode
- a : Lowercase alphanumeric (double-byte) mode
- A : Uppercase alphanumeric (single-byte) mode
- a : Lowercase alphanumeric (single-byte) mode
- 1 : Double-byte number mode
- 1 : Single-byte number mode
-  : Code entry mode


Use  to select a character entry mode and then press  (OK).

- The entry modes that you can select differ depending on the function you are using.


Entering Alphanumeric Characters

You can use the keys  to  to enter characters. More than one character is assigned to each key. The following table shows the key assignment for entering characters.

 

 
	Number of Times to Press the Key											
Key	1	2	3	4	5	6	7	8	9	10	11	12
	.	@	—	_	/	:	~	1				
	a	b	c	2								
	d	e	f	3								
	g	h	i	4								
	j	k	l	5								
	m	n	o	6								
	p	q	r	s	7							
	t	u	v	8								
	w	x	y	z	9							
	0	Inputs symbols										
	Switches the entry mode between uppercase and lowercase. (When character entry has not yet been confirmed, switches the characters being entered between uppercase and lowercase.)											
	Adds a line break. (When character entry has not yet been confirmed, returns to the previous character.)											

When you change your e-mail address, you cannot use the characters in  for the account name (part of the address to the left of @).

■ Entering Two or More Characters Assigned to the Same Key

After you enter the first character, press  and then enter the next character.

■ Deleting Characters

To delete one character at a time, move the cursor to the character you want to delete and then press . To delete all characters to the right of the cursor, hold down  for at least one second. If there are no characters to the right of the cursor, holding down  will delete all the characters.

■ Starting a New Line

Press .

- Certain functions such as c-mail do not support entering new lines.

■ Entering E-mail Addresses










■ E-mail Address Compatible Characters

- Before you enter an e-mail address, switch to the lowercase alphanumeric (single-byte) mode.
- When changing your e-mail address, you can enter up to 30 single-byte alphanumeric and symbol characters for the account name (part to the left of @). Note the following:
 - Uppercase characters cannot be used.
 - Period (.) or zero (0) cannot be used as the first character.

■ How to Enter E-mail Addresses

Example: Entering “taro.23@ezweb.ne.jp”

Enter “taro.23”.

- t : Press  once.
 a : Press  once.
 r : Press  three times.
 o : Press  three times.
 . : Press  once.
 2 : Press  once and then .
 3 : Press  once and then .

➔ Press  (OK).

➔ Enter “@”.

- @: Press  twice.

➔ Press .

The cursor moves to the conversion candidate list.

➔ Use  to select @ezweb.ne.jp and then press  (OK).

Entering Pictograms

When a character entry screen is displayed, press

 (😊 · Sym · (^0^)).

➔ Use  to select the pictogram you want to enter and then press  (Select).




















- You can enter pictograms consecutively if you press

 (Repeat) instead of  (Select).

Phone Book

Saving a Phone Book Entry







When the standby screen is displayed, hold down  for at least one second.

- ➔ Use  to select  [*Name*] and then press  (Select).
- ➔ Enter a name and then press  (OK).
The  [*Reading*] for the name is entered automatically.
- ➔ Use  to select  [*Phone No.1*] and then press  (Select).
- ➔ Enter a phone number and then press  (OK).
 - If the phone number is for a fixed-line phone, enter the phone number starting with the area code.
- ➔ Use  to select a phone number type and then press  (Select).
 - Follow the next step to enter an e-mail address. If you do not want to enter an e-mail address, press  (Reg).
- ➔ Use  to select  [*E-mail Address1*] and then press  (Select).
- ➔ Enter an e-mail address and then press  (OK).
- ➔ Use  to select an e-mail address type and then press  (Select).
- ➔ Press  (Reg).

- The phone book can store up to 1,000 entries.
- The cell phone automatically saves an entry to the lowest available memory number from 000 to 999.
- You can save three phone numbers and three e-mail addresses for each phone book entry.
- You can also assign a group No., and enter birthday, address, and other information.






Dialing from the Phone Book

When the standby screen is displayed, press .

- ➔ Use  to select the entry containing the phone number you want to dial and then press  (Detail).
- ➔ Use  to select the phone number and then press  (Select).
- ➔ Use  to select *Voice Call* and then press  (OK).



Editing Phone Book Entries

When the standby screen is displayed, press .

- ➔ Select an entry and press  (Detail).
- ➔ Press  (Edit).
- ➔ Edit the contents and then press  (Reg).
- ➔ Use  to select *Overwrite* and then press  (OK).

Saving a Phone Number from the Incoming or Outgoing History

Example: Saving a phone number from the incoming history to the phone book

When the standby screen is displayed, press  and use  to select the phone number you want to save.

➔ Press  (SubMenu).

➔ Use  to select *Reg to Adrs Book* and then press  (OK).

➔ Use  to select *Register New* and then press  (Select).

➔ Use  to select a phone number type and then press  (Select).








- For details on saving a phone book entry, see page 25.

Pair Function

You can register a maximum of five pair partners you contact often to easily call or send mail.

Registering a Pair Partner




When the standby screen is displayed, press .

- ➔ Use  to select a blank screen and then press  (Select).
- ➔ Use  to select *YES* and then press  (OK).
- ➔ Use  to select a pair partner, press  (Detail) and then  (Select).
 - When registering a phone book entry with multiple phone numbers and e-mail addresses as pair partner, select the phone number and e-mail address to use with the Pair function.

- When you delete a phone book entry registered in the pair partner, the phone book entry is also deleted from the Pair function.




Making a Call to a Pair Partner

When the standby screen is displayed, press .

- ➔ Use  to select the person you want to call.
- ➔ Use  to select *Call* and then press  (Select).

Sending Mail to a Pair Partner

When the standby screen is displayed, press .

- ➔ Use  to select the person you want to send mail.
- ➔ Use  to select *E-mail* or *C-mail* and then press  (Select).
 - To create an e-mail message, see “Creating and Sending E-mail Messages” on page 28. To create a c-mail message, see “Creating and Sending C-mail Messages” on page 31.

Mail

Using E-mail





















To use e-mail, you need to apply for an EZweb subscription. If you did not apply for an EZweb subscription at the time of purchase, contact an au shop or the au Customer Service Center. Also, before use, you need to configure initial settings.

You can send and receive e-mail with other cell phones that support e-mail, and with PCs. In addition to text messages of up to 5,000 double-byte (or 10,000 single-byte) characters, you can also send photos and movies by e-mail.

- The packet communication charge for sending and receiving e-mail applies to the amount of data sent and received.
- You can send an e-mail message to up to 30 different addresses at one time.
- You can send up to 1,000 e-mail messages per day (a message with multiple recipients is counted as more than one message).
- Sending and receiving e-mail messages that include attachment data may take a while.










Creating and Sending E-mail Messages

When the standby screen is displayed, press .




- ➔ Use  to select *Create New* and then press  (Select).
- ➔ Use  to select  *Address* and then press  (Select).
- ➔ Use  to select *Quote Adrs Book* and then press  (OK).
- ➔ Use  to select a phone book entry and then press  (Detail).
- ➔ Use  to select an address and then press  (Select).
- ➔ Use  to select  *Subject* and then press  (Select).
- ➔ Enter a subject and then press  (OK).
 - You cannot enter single-byte katakana characters or a new line in a subject.
- ➔ Use  to select  (Text) and then press  (Select).
- ➔ Enter text and then press  (OK).
 - You cannot enter single-byte katakana characters.
- ➔ Press  (Send).

Reading Received E-mail Messages

When you receive an e-mail message, *E-mail* appears on the standby screen.

- ➔ Use  to select *E-mail* and then press  (Select).
 -  is displayed for a folder containing new message.
- ➔ Use  to select a folder and then press  (Select).
 - : Indicates a read message.
 - : Indicates an unread message.
- ➔ Use  to select the new message and then press  (Select).

Reading an E-mail Message from the E-mail Menu






When the standby screen is displayed, press  to display the E-mail menu, use  to select *Inbox* and then press  (Select).


For subsequent operations, see “Reading Received E-mail Messages” above.

Reading an E-mail Message with an Attached Photo or Movie

Example: Viewing an attached photo








Display the e-mail message that has an attached photo (above).

- ➔ Use  to select the file name and then press  (Select).
- ➔ Use  to select the file name and then press  (Receive).
- ➔ Press  (Play).

- Selecting the file name or pressing  (Receive) may be unnecessary for some files to be displayed, depending on the file size.

Replying to Received E-mail Messages

When the standby screen is displayed, press .

- ➔ Use  to select *Inbox* and then press  (Select).
- ➔ Use  to select a folder and then press  (Select).
- ➔ Use  to select the message you want to reply to and then press  (Select).
- ➔ Press  (Re/Hold:QkRe).

“Re:” is prefixed to the subject, and the text of the message is quoted.
- ➔ Refer to “Creating and Sending E-mail Messages” (page 28) for subsequent operations.














Rejecting Spam

Setting mail filters to reject spam is recommended.
The サポート設定 (Supportive Settings) helps you to set mail filters easily by answering questions that appear on the screen.

Setting Mail Filters

Example: Connecting to サポート設定 (Supportive Settings)

When the standby screen is displayed, press .

- ➔ Use  to select *E-mail Setup* and then press  (Select).
- ➔ Use  to select *Mail Filter* and then press  (Select).
- ➔ Use  to select *次へ (Next)* and then press  (Select).
- ➔ Use  to select the input box and then press  (Input).
- ➔ Enter your security code and then press  (OK).
- ➔ Use  to select *送信 (Send)* and then press  (Select).
- ➔ Use  to select an item and then press  (Select).

カンタン設定 (Simple Settings)

サポート設定 (Supportive Settings)	Set the filter by answering questions This is recommended for users who want to configure settings while confirming conditions.
フィルターレベル (高) Filter Level (High)	Shut out all mail from PCs This is recommended for users who only want to send mail to and receive mail from cell phones.
フィルターレベル (中) Filter Level (Medium)	Block unsolicited advertisement, spoof e-mail and mail from specific addresses This is recommended for users bothered by certain senders or spam mail.
フィルターレベル (低) Filter Level (Low)	Block unsolicited advertisement and spoof e-mail This is recommended for users who wish to use the minimum filter setting.

- You can also prevent spam by changing your e-mail address. For details on changing your e-mail address, see page 14.

Using C-mail

C-mail is a service that uses phone numbers as addresses to exchange messages between au cell phones that support c-mail. A c-mail message can contain up to 50 double-byte (or 100 single-byte) characters.

- The c-mail send charge applies when sending c-mail.










C-mail Safety Block








C-mail safety block is a function that allows you to reject c-mails that include URLs (<http://△△△>, <https://△△△>) or phone numbers in the c-mail message text.

C-mail safety block is valid by default. Cancel the setting if you want to receive c-mails that include URLs and phone numbers in the message text.

Creating and Sending C-mail Messages










When the standby screen is displayed, hold down  for at least one second.

- ➔ Use  to select *Create New* and then press .
- ➔ Use  to select  [*Address*] and then press .
- ➔ Use  to select *Quote Adrs Book* and then press .
- ➔ Use  to select a phone book entry and then press .


 
 
- ➔ Use  to select an address and then press .
- ➔ Use  to select  [*Text*] and then press .
- ➔ Enter text and then press .
- ➔ Press  (Send).

Reading Received C-mail Messages

When you receive a c-mail message, *C-mail* appears on the standby screen.

- ➔ Use  to select *C-mail* and then press .
-  is displayed for a folder containing new message.
- ➔ Use  to select a folder and then press .
- : Indicates a read message.
- : Indicates an unread message.
- ➔ Use  to select the new message and then press .

Reading a C-mail Message from the C-mail Menu

When the standby screen is displayed, hold down  for at least one second to display the C-mail menu, use  to select *Inbox* and then press .


For subsequent operations, see “Reading Received C-mail Messages” above.

Camera


Your cell phone is equipped with a CCD camera with approximately eight million effective pixels for shooting photos and movies. You can use the self-timer and autofocus.

Shot images can be used for the standby screen, and attached to e-mail messages.


Photo Taking Tips

When taking photos, position the cell phone so that  is not displayed upside down or inclined. Frame the subject within the display and hold the cell phone steady with both hands to avoid shaking.

 
Open Position - Portrait

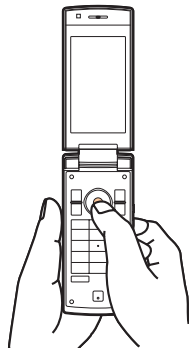


Open Position - Landscape

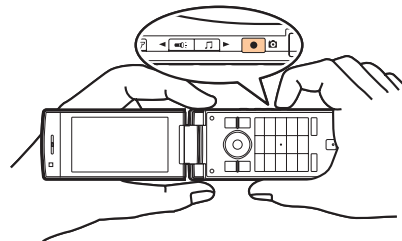 

Own Photo Position

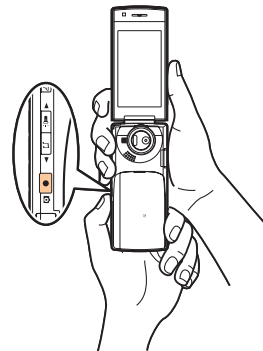 

Viewer Position

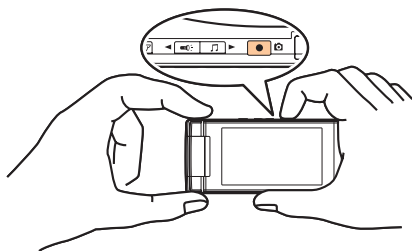 

- Confirm the positions of the lens and mobile light, and take care not to cover them with a strap or finger.

About Photo Modes

The following modes are available for taking photos. At the time of purchase, W.paper (Wide) is set to Photo (W.paper) mode and 8M is set to Photo (DSC) mode.


Mode	Photo Size	Storage Location
Photo (W.paper)	W.paper (Normal)	The <i>Photo Folder</i> in the Data Folder of the cell phone
	W.paper (Wide)	
Photo (DSC)	0.3M	The <i>DSC Folder</i> in the Data Folder of a microSD memory card*
	1M	
	Full Hi-Vision	
	2M	
	3M	
	8M	

* When a microSD memory card (commercially available) is not inserted, the files are saved to the Data Folder of the cell phone.

Taking a Photo

When the standby screen is displayed, hold down  for at least one second.

The monitor screen appears.


➔ Point the AF frame at the subject and then press  (Shoot).

 
The camera focuses automatically and the shutter clicks. The preview screen is displayed.

Using to Take a Photo

Point the AF frame at the subject, press  halfway to focus, and then press  fully to release the shutter.









Saving a Photo

Press  (Save) on the preview screen.

- If you do not want to save the photo, press  in the preview screen.

Viewing Photos

When the standby screen is displayed, press .

- ➔ Use  to select *DATA FOLDER* and then press  (Select).
- ➔ Use  to select *Photo Folder* and then press  (Select).
- ➔ Use  to select a folder and then press  (Select).
- ➔ Use  to select the photo you want to view and then press  (Select).

EZweb is an information service that allows you to enjoy browsing the Internet on your cell phone. You can also download Chaku-Uta-Full-Plus™, Chaku-Uta-Full®, Chaku-Uta®, news, and other contents from web pages. To use EZweb, you need to apply for an EZweb subscription. If you did not apply for an EZweb subscription at the time of purchase, contact an au shop or the au Customer Service Center. Also, before use, you need to configure initial settings.

- The packet communication charge for EZweb connection applies to the amount of data sent and received, not to the length of time connected.
- In addition to communication charges, some sites charge for providing information.

Accessing Sites

■ Viewing the au one Top

You can access EZweb from the au one Top. A variety of useful and fun sites are available on EZweb.
When the standby screen is displayed, press **[E]**, use **[↑]** to select *au one Top* and then press **[●]** (Select).



キーワード検索機能 (Search by Keyword)
Provides a search function for searching for information by keyword.

カテゴリ(メニューリスト) (Category (Menu List))
Provides a list of various content provider sites.

トップニュース (Top News)
Provides automatic updates of the latest news.

最新オススメ情報 (Latest News)
Introduces up-to-date information concerning entertainment, daily life, etc.

天気・乗換・占い・テレビ・銀行 (Weather, Transportation, Horoscope, TV & Bank)
Provides direct access to these au one services.

買う (Shopping & Auctions)
Provides a list of shopping and auction sites available from your cell phone.

知る (Tips & Tools)
Provides information on sports and stock prices, as well as useful tools such as maps and dictionaries.

楽しむ (Hobbies & Culture)
Provides the latest information, such as games, music, books, hobbies and entertainment.

暮らす (Lifestyle)
Provides travel, restaurant and other lifestyle-oriented information.

集まる (Community)
Provides interesting and useful information that you can use for SNS or blogs.

メール (Mail)
Provides an extra e-mail address that can be used on your PC.

マイページ (My Page)
Provides useful information and tools tailored to your cell phone usage and a large data storage area.

au style
Introduces information and sites that au recommends.

とくする情報 (Valuable Information)
Presents gifts and push information to the EZweb subscriber for free.

auお客さまサポート (au Customer Support)
Provides information about charges, various applications, au online manual and notices from au.


 
auワンちゃんの部屋 (au Doggy's Room)
Introduces au Doggy.


 
カンタンアクセス・オープンサイト (Simple Access & Open Site)
Provides easy access and introduces open sites.

災害用伝言板 (Disaster Message Board)
Register and confirm safety information in time of disaster.







 
ENGLISH
Introduces English sites.

Basic Operations


Use  to select the site you want to access and then press  (Select).



Press  or  to return to the previous screen. Hold down either key for at least one second to return to the au one Top.

The following describes the basic operations that are available while accessing sites.

Key Operation	Description
	Exits EZweb.
	Moves the cursor up and down. When there is data available above or below the current screen, scrolls up and down the screen one line at a time.
	When there is data available above or below the current screen, scrolls the screen page by page.  : Scrolls one page up.  : Scrolls one page down.
 、 	Returns to the previous screen.

Bookmarking Frequently Accessed Pages

When the page you want to bookmark is displayed, press  (Browser Menu).

➔ Use  to select *New bookmark* and then press  (OK).

- Some pages cannot be bookmarked.

➔ Press  (Reg).



The displayed page is bookmarked, and its title and URL are added to the Bookmark.

- The Bookmark can contain up to 100 titles and URLs.

Viewing Bookmarked Pages









When the standby screen is displayed, press .

➔ Use  to select *Bookmark(s)* and then press  (Select).

➔ Use  to select the bookmark for the page you want to view and then press  (Connect).
The cell phone connects to the site.







Checking Charges

When the standby screen is displayed, press .

- ➔ Use  to select **SETTINGS** and then press  (Select).
- ➔ Use  to select **Time/Toll/Sub** and then press  (Select).
- ➔ Use  to select **Inquire Toll** and then press  (Select).
- ➔ Use  to select **YES** and then press  (OK).
 - Select the item you want to check and then follow the on-screen instructions.

Downloading Chaku-Uta-Full-Plus™/Chaku-Uta-Full®/Chaku-Uta®

When the standby screen is displayed, press .

- ➔ Use  to select **au one Top** and then press  (Select).
- ➔ Use  to select **カテゴリ (メニューリスト)** (Category (Menu List)) and then press  (OK).
- ➔ Use  to select **着うたフルプラス (Chaku-Uta-Full-Plus™)**, **着うたフル・ビデオクリップ (Chaku-Uta-Full®·Video Clip)** or **着うた (Chaku-Uta®)** and then press  (Select).

- ➔ Use  to select the site you want to access and then press  (Select).

The download instructions appear.

- Fee-based information sites require entry of EZ password or Premium EZ password. Follow the on-screen instructions to enter either password. See page 15 for details.

- ➔ **Follow the on-screen instructions.**

Download is completed.

- Downloaded data is saved automatically to the Data Folder.

- ➔ Press  (Play).

The downloaded Chaku-Uta-Full-Plus™, Chaku-Uta-Full® or Chaku-Uta® plays.

- This procedure is only an example for the purpose of explanation and may differ from actual procedures. Follow the instructions on the site from which you want to download the data.

 
EZ News Flash/au one Gadget

EZweb Subscription Required


Use the EZ News Flash/au one Gadget to display flash news, or activate the set gadget on the standby screen. You can check the news details and other information by selecting the ticker field.

You can use the EZ News Flash and au one Gadget by making a few simple settings following the EZweb initial setup.

Basic Operations

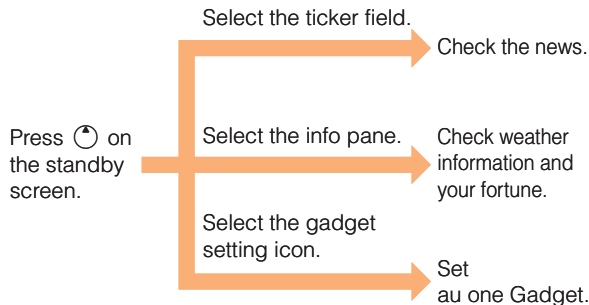

- The EZ News Flash information is automatically received at no charge. Note, however, that packet communication charges may be incurred for manual updates and connecting to EZweb sites. In this case, a confirmation screen for network connection is displayed.

- Packet communication charges are incurred for using au one Gadget applications that require network connection for information updates.
- The EZ News Flash information is updated at regular time intervals.  appears while receiving information.

Setting EZ News Flash

The EZ News Flash is available free of charge. You have only to make a few simple settings. After following the procedure in “Initial Setup of E-mail and EZweb” on page 11, configure EZ News Flash settings. If you did not configure the EZ News Flash settings at the time of the initial setup, follow the steps below.

When the standby screen is displayed, select the ticker field and then press (OK).

➔ Follow the on-screen instructions.

The setup procedure is completed.

- When the standby screen returns, a message asking you to wait for a while until the next update takes place appears in the ticker field.

■ Canceling EZ News Flash

When the standby screen is displayed, select the ticker field and then press  (News).

➡ Press  (メニュー[Menu]), use  to select サービス設定解除 (Service Cancellation) and then press  (選択[Select]).

➡ Follow the on-screen instructions.

■ Changing the Reception Settings for EZ News Flash Information

You can change the ring tone, vibrator and LED settings under M216 *NewsFlash Receive* for reception of EZ News Flash information.

If you do not want the ring tone to sound when receiving EZ News Flash information, set the volume to *OFF*.

- You can configure the au one Gadget settings from the gadget setting icon on the standby screen.

Using GPS (Global Positioning System), EZ Navi provides useful positional information services.

When the standby screen is displayed, press  and then use  to select the EZnavi.

- The packet communication charges for using EZ Navi services apply to the amount of data sent and received. Some services may require a separate information fee.
- Before using EZ Navi, you must configure initial settings of EZweb (page 11).

Passenger Seat Navi for People in the Passenger Seat to Check the Route

Passenger Seat Navi guides the passengers to the destination with the best route using voice and map.

Drivers are not allowed to use Passenger Seat Navi.

Security Navi to Check Where Your Kids Are

The Security Navi application is made up of the following three functions:

いつでも位置確認 (Auto Position Search [monthly charge]),
エリア通知 (Area Message [no monthly charge]),
位置確認メール (Position Search Mail [no monthly charge])

Using these functions, you can check the position of an au cell phone that supports Security Navi; and automatically send a mail notification to the specified au cell phones when you enter (or are in) or leave (or are no longer in) the set area within a predetermined period of time.

EZ Navi Walk for When You Go Out

Displays various useful menu items for when you are out. Two types of mode are provided: Full mode which allows you to use all of the functions and Simple mode which is limited to easy-to-use functions.

■ Full Mode

フリーワード (Free Word)	Search for information by entering keywords such as store names, addresses, and station names.
トータルナビ／ 地図 (Total Navi/ Maps)*	Receive navigation on the optimal route using modes of transport such as trains, airplanes, buses, and taxis, or check a map of your current location or a desired location.
乗換／時刻表 (Train Connections/ Timetables)*	Search for train connections, timetables, and train status information.
お店／施設／イ ベント (Stores/ Facilities/Events)	Search for stores, facilities, event information, and the like.
ドライブ／渋滞 情報 (Driving/ Traffic Jam Information)	Check information on roads throughout Japan and traffic jams in real time.
オススメ便利 メニュー (Recommended Convenient Menus)	Use the PC link service and functions to make EZ Navi Walk more enjoyable.

設定／会員登録／
インフォ
(Settings/
Membership
Registrations/Info)

Check various settings, membership registrations, campaign information, and the like.

■ Simple Mode

ナビをする (Receive Navigation)	Receive navigation on the optimal route using modes of transport such as trains, airplanes, buses, and taxis.
現在地の地図 (Map of Your Current Location)	Check a map of the area around your current location.
乗換案内 (Train Connections)	Check the train connections from one station to another.
渋滞／交通情報 (Traffic Jams/ Traffic Info)	Check information on roads throughout Japan and traffic jams in real time.
会員登録・ インフォ (Membership Registrations/Info)	Check various settings, membership registrations, campaign information, and the like.
フルモードとは (What is Full Mode?)	Receive guidance on the functions available in Full mode.

* You can use your voice to configure your settings (Voice input function).

- EZ Navi Walk has menus that you can use free of charge and menus requiring registration (fee-based).

■ Map of Your Current Location



★ represents your initial location. As you start moving, changes of your location are tracked by continuous positioning and indicated in real time by 🚗.

The 現在地の地図 (Map of Your Current Location) option displays your current location in real time.

■ 3D Navi



Navigation engine by NAVITIME JAPAN

Map: Shobunsha Publications, Inc.

©2008 ZENRIN CO., LTD.

Geographical Survey Institute

3D data: ©2008 ZENRIN CO., LTD.

GEO Technical Laboratory Co., Ltd.

Z06A-No.2137

Shows a 3D view at guidance points and around the destination area.

Evacuate Navi to Guide You Home or to Nearby Evacuation Areas during Disasters

Nearby public evacuation areas or the direction to your home can be determined using the map data pre-installed on the SH001 (避難所マップ [Evacuate Area Map]).

Other useful contents can be downloaded from the 災害時ナビ (Evacuate Navi) section of the EZweb site, including 帰宅支援マップ (Route Home Map) which can guide you between two locations you specify, for example, from your office to home.

- Some contents require a monthly charge.
- Use the information on the screen as a reference and always follow the instructions of police, fire and other municipal authorities.
- When using Evacuate Navi, checking your current position may take more time than usual depending on the status of the GPS satellites.

 
TV (1 Seg)

EZweb Subscription Required

"1 Seg", a mobile terrestrial digital television service in Japan, is available on the SH001.

Using the TV Antenna

When watching TV (1 Seg), extend the TV antenna to ensure you can receive an adequate signal. The TV antenna can be extended in three stages. Pull it out as far as it will go. The TV antenna can also be rotated 360 degrees. Use it pointed in a direction in which you can get a good reception.

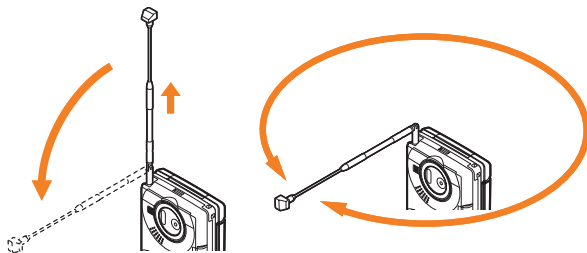

- Before using TV, you must configure initial settings of EZweb (page 11).
- If you are watching TV indoors, you may be able to improve the reception by moving closer to a window.

- The continuous viewing times of TV (1 Seg) are as follows. The figures vary according to the usage of data broadcasts.

Continuous viewing time	Using earphones	DBEX ON: Approx. 3 hrs 40 min. DBEX OFF: Approx. 3 hrs 50 min.
	Using the speaker	DBEX ON: Approx. 3 hrs 20 min. DBEX OFF: Approx. 3 hrs 20 min.

- For information about the "1 Seg" service, refer to the following homepage.

The Association for Promotion of Digital Broadcasting

From a PC	http://www.dpa.or.jp/
From a cell phone	http://www.dpa.or.jp/1seg/k/


Initial Setup of au Media Tuner

To watch TV (1 Seg) using the au Media Tuner, you need to configure initial settings.

When the standby screen is displayed, press



TV.

Disclaimer notes are displayed.

➔ **Use**  **to check the disclaimer notes, use**  **to select** **OK**, and then press  (**選択 [Select]**).

The initial setting screen for using the au Media Tuner is displayed.

- Follow the on-screen instructions to configure each setting. Then, the screen for setting TV (1 Seg) channels appears.

➔ **Use**  **to select** **オート設定 (放送波) (Auto (Broadcasting wave))** and then press  (**選択 [Select]**).

Automatic channel scanning begins. When receivable channels are found, the channel setup is completed.



- Select **マニュアル設定 (Manual)** to set the channel manually.

Watching TV (1 Seg)

 
When the standby screen is displayed, press

TV.

To Change Channels



You can use the number keys to directly change the channel. Alternatively, you can press  or  to change the channel.

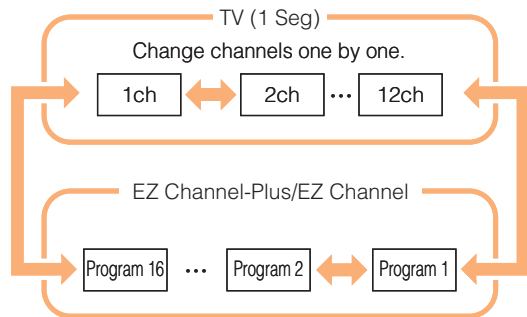
You can select TV (1 Seg) and EZ Channel-Plus/EZ Channel programs.




- Before using this feature, you must configure au Media Tuner initial settings (see the procedure on the left).

Basic Operations

 Launch TV (1 Seg) to start receiving data broadcasts. The data operation screen appears when a data broadcast is received. Press  (Vol/Ch) on the data operation screen to switch to the TV operation screen. On the TV operation screen, pressing  switches the display.

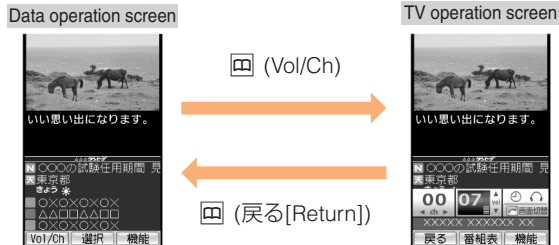




- On the TV operation screen, use  to adjust the volume.

Watching TV (1 Seg) in Viewer Position



 When you start au Media Tuner after setting the initial settings, you can also watch TV (1 Seg) with your cell phone in the Viewer Position.



The following shows the side key operations for when the cell phone is in the Viewer Position.

Side Key Operation	Description
	Short press: Changes the channel. Long press: Searches for channels.
	Short press: Adjusts the volume. Long press: Adjusts the volume (continuously).
	Shows/hides the information on the screen.

Exiting the au Media Tuner

Press , use  to select はい (YES) and then press  (OK).














In Case of Loss of Your SH001












The Remote Ctrl Lock allows you to remotely activate the Auto Lock, FeliCa Lock, and Address Book Lock, preventing others from using your cell phone.

Setting Conditions for Activating the Remote Ctrl Lock

You can activate the Remote Ctrl Lock by calling your SH001 a set number of times from a registered phone number within a specified period of time.

When the standby screen is displayed, press .

- ➔ Use  to select **SETTINGS** and then press  (Select).
- ➔ Use  to select **Privacy/Rstr** and then press  (Select).
- ➔ Use  to select **Security Lock** and then press  (Select).
- ➔ Use  to select **Rem. Ctrl Lock** and then press  (Select).
- ➔ Enter Lock No., and then press  (OK).
- ➔ Use  to select **Valid No.** and then press  (Select).
- ➔ Use  to select **[Register New]** and then press  (Select).

- ➔ Use  to select **Direct Input**, press  (OK), enter a phone number, and then press  (OK).
- ➔ Press  (Comp).
- ➔ Use  to select **Duration(min)** and then press  (Select).
- ➔ Enter a time and then press  (Set).
 - This sets the time limit for receiving the set number of calls after the first call is received.
 - You can set a time from one to ten minutes.
- ➔ Use  to select **No. of Incm** and then press  (Select).
- ➔ Enter a number of calls, and then press  (Set).
 - This sets the number of calls to receive to activate the Remote Ctrl Lock.
 - You can set a number of calls from three to ten.
- ➔ Press  (Save).

Remotely Activating the Remote Ctrl Lock on Your SH001

Call the SH001 from the registered phone number repeatedly within the set time limit.

- When the specified number of calls are received, the Remote Ctrl Lock is activated and a message plays telling you that the cell phone is locked.

Activating the Remote Ctrl Lock by the Security Lock Service

Even if the Remote Ctrl Lock is not set in advance, the Remote Ctrl Lock can be activated by calling au Customer Service Center or completing the application process on au Customer Support from a PC.


The Security Lock Service is available free of charge.

- You must fill out an application to use au Customer Support (the application can be filled out even after your cell phone is lost).

■ Calling au Customer Service Center for Activating/Canceling the Remote Ctrl Lock

From an au cell phone: 113 without a prefix (toll free)

From any other cell phone or fixed-line phone:

 0077-7-113 (toll free)

Open 24 hours






 
Follow the voice guidance to complete the application process.




■ Activating/Canceling the Remote Ctrl Lock from a PC


Login to au Customer Support (<http://cs.kddi.com/>) and complete the application process by following the on-screen instructions.

- The Remote Ctrl Lock cannot be activated when the SH001 is turned off or out of the service area, or Emission OFF is set to *ON*.

Troubleshooting

Symptom	Possible Cause	Remedy	Page
Cannot turn on power.	● Is the battery pack charged?	Charge the battery pack.	9
	● Did you hold down  for at least one second?	Hold down  for at least one second.	11
Cannot make calls.	● Is power turned on?	Hold down  for at least one second.	11
	● Is OUT (out of range indicator) displayed?	Move to a location where OUT (out of range indicator) is no longer displayed, and try again.	11
	● Is your hand or a metal object covering the area around the internal antenna?	Make sure your hand or any other metal object is not covering the area around the internal antenna.	7
	● Did you enter the phone number starting with the area code?	When making a call to a phone other than a cell phone, you need to enter the area code even if you are inside the same area.	16
Cannot receive calls.	● Is OUT (out of range indicator) displayed?	Move to a location where OUT (out of range indicator) is no longer displayed.	11
	● Is power turned on?	Hold down  for at least one second.	11
No response when a key is pressed.	● Is power turned on?	Hold down  for at least one second.	11
A warning tone sounds and power turns off.	● Is there enough power left in the battery pack?	Charge the battery pack.	9
Calls are answered automatically.	● Is Answer memo turned on?	Hold down  for at least one second to turn off Answer memo.	20

Symptom	Possible Cause	Remedy	Page
Cannot hear the other party.	● Is the earpiece volume too low?	Press  during a call to increase the earpiece volume.	18
When making a call, a beeping sound is heard from the earpiece and a connection cannot be established.	● Is OUT (out of range indicator) displayed? Or are you in a location where the signal is too weak?	Move to a location where OUT (out of range indicator) is no longer displayed.	11
	● Is the wireless line busy or is the phone you are calling on another line?	End the call and try again later.	16
The incoming LED flashes but the ring tone does not play.	● Is manner mode turned on?	Hold down  for at least one second to turn off manner mode.	18
	● Is  (ring tone off indicator) displayed?	Increase the volume of the incoming call ring tone.	19
Cannot charge the battery pack.	● Is the cell phone inserted in the desktop holder (sold separately) properly?	Insert the cell phone in the desktop holder properly.	9
	● Are the plug and connector of the common AC adapter 01/02 (sold separately) inserted properly?	Insert the plug and connector firmly.	
When the camera is activated, no subject is displayed.	● Is a finger or other object covering the camera lens?	Check the position of the camera lens and remove the obstacle.	32

- For more detailed information, visit the following au troubleshooting sites:
 - From an au cell phone:  ⇒ *au one Top* ⇒ *auお客さまサポート* (au Customer Support) ⇒ *調べる* (Search) ⇒ *オンラインマニュアル* (Online Manual) ⇒ *故障診断Q&A* (Troubleshooting FAQ)
 - From a PC: <http://www.kddi.com/customer/service/au/trouble/kosho/index.html>

Index

Numeric

1 Seg	44
-------------	----

A

Accessories	6
Answer memo	20
Playback	20
Turning off	20
Turning on	20
au one Gadget	39
Gadget setting icon	39

B

Battery level	12
Battery pack	6, 9
Battery pack cover	7

C

Camera	32
Photo taking tips	32
Taking a photo	33
Cell phone etiquette	2
Character input	22
Character entry modes	22
Deleting characters	23
Entering characters from the same key	23
Starting a new line	23

Charging the battery pack	9
Checking charges	38
Closed Position	7, 8
C-mail	31
C-mail safety block	31
Creating and sending	31
Reading received mail	31
Contents	4

D

Desktop holder	9
Disaster Message Board Service	3
Display	7, 12
Domain	14
Downloading Chaku-Uta®	38
Downloading Chaku-Uta-Full®	38
Downloading Chaku-Uta-Full-Plus™	38

E

Earpiece volume	18
E-mail	28
Creating and sending	28
Initial settings	11
Reading received mail	29
Replying	29
Viewing attached images	29
E-mail address	11
Available characters	22
Changing	14
Entering	23

Entering pictograms	24	Internet	35
Evacuate Navi	43	Sites	36, 37
EZ Navi	41	K	
EZ Navi Walk	42	Key assignments	10
EZ News Flash	39	L	
Canceling	40	Language	11
Changing the reception settings	40	Learning the basics	10
Info pane	39	Lock No.	15
Setting	39	M	
Ticker field	39	Mail	28
EZ password	15	C-mail	31
EZweb	35	E-mail	28
Accessing sites	36	Mail filters	30
au one Top	36	Simple settings	30
Basic operations	37	Main menu	13
Initial settings	11	Manner mode	18
G		N	
Global function	21	Names of parts	7
Areas setting	21	Notification icon	11
Making a call to Japan	21	O	
I		One-ring calls	18
Incoming history	18	Open Position	7, 8
Indicators	12	Outgoing history	18
Initial settings	11, 45	Own Photo Position	8
au Media Tuner	45		
E-mail · EZweb	11		
TV (1 Seg)	45		
International Call	16		

P

Pair Function	27
Making a call to a pair partner	27
Registering a pair partner	27
Sending mail to a pair partner	27
Passenger Seat Navi	41
Passwords	15
Phone (call)	16
184/186	16
Answering	17
International Call	16
Making	16
Returning	18
Phone book	25
Dialing	25
Editing	25
Saving	25
Saving a phone number from the incoming or outgoing history	26
Phone number	11
Photos	32
Photo modes	33
Taking	33
Viewing	34
Playback	
Answer memo	20
Premium EZ password	15

R

Remote Ctrl Lock	47
------------------------	----

Ring tones

Changing the type	19
Changing the volume	19

S

Security code	15
Security Lock Service	48
Security Navi	41
Signal strength	12
Sites	36
Bookmarking	37
Viewing from bookmarks	37
Spam	30

T

Troubleshooting	49
Turning on/off power	11
TV (1 Seg)	44
Antenna	44
Basic operations	46
Changing channels	45
Exiting	46
Initial settings	45

V

Viewer Position	8
Viewing	
Photos	34

For inquiries, call: au Customer Service Center

For general information and charges (toll free)

From fixed-line phones:



0077-7-111

From au cellphones:

157

area code not required

PRESSING ZERO WILL CONNECT YOU TO AN OPERATOR
AFTER CALLING 157 ON YOUR au CELLPHONE

For loss, theft or damage and operation information
(toll free)

From fixed-line phones:



0077-7-113

From au cellphones:

113

area code not required

From EZweb:

Access Method

EZ ▶ au one Top ▶ auお客様サポート (au Customer Support)
▶ お問い合わせ (Inquiries)
• Menus are subject to change without prior notice.

なるほど! au
みんなでつくる、auQ&Aサイト

Access Method

EZ ▶ au one Top ▶ auお客様サポート (au Customer Support)
▶ みんなでQ&A「なるほど! au」 (au User's Forum)

Read this code for an easy
access to

みんなでQ&A「なるほど! au」
(au User's Forum). ▶

• The packet communication
charge applies.



モバイル・リサイクルネットワーク
MOBILE PHOSPHORUS RECYCLING NETWORK

Cellphone and PHS operators collect and recycle unused
telephones, batteries and battery chargers at stores
bearing the ♻️ logo regardless of brand and manufacturer
to protect the environment and reuse valuable resources.

Read this code for
an easy access to
au Online Manual.



January 2009 Edition

Sales: KDDI CORPORATION・
OKINAWA CELLULAR TELEPHONE COMPANY
Manufactured by: SHARP CORPORATION